



DETAILS OF THE
MAIN STATOR AND
MAIN TERMINAL
CONNECTIONS
ARE SHOWN ON
SEPARATE
WIRING DIAGRAM

HAND TRIMMER (when fitted)
REMOVE LINK ACROSS 1 & 2
THE USE OF TWO CORE INSULATED
SCREENED CABLE IS RECOMMENDED.
CONNECT SCREEN TO AVR
TERMINAL 2 ONLY.

LOW VOLTAGE
OPERATION MODE
FOR 110-120V
AVR INPUT
LINK 3 & 4

BASE DIAGRAM		
CERTIFIED PRINT (ONLY IF SIGNED)	FRAME ---	OTHER FEATURES
BY	CONTROL SERIES SX460	
DATE	POLES	
DRAWN	No. OF ENDS ---	
CHK'D	SENSING 2 PHASE	
APP'D		
		SHEET 1 OF 1 SHEETS